





Original car accessories
Tel. +7(3952)707-168
deflektor.ru

Hood deflector mounting manual


- Open the car hood.
- Remove protective wrapping film and covers.
- Get the deflector centered on the edge of the hood while opened.

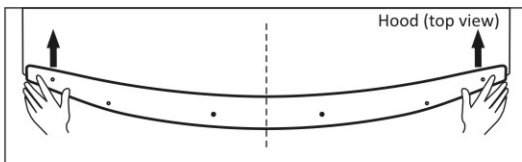


- Mark fitting locations on the hood.

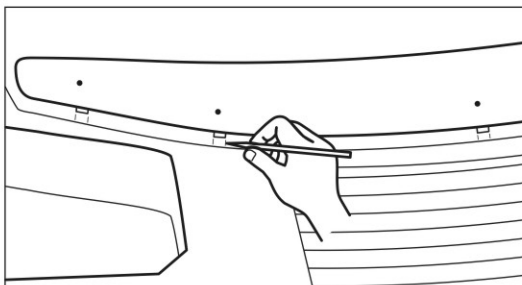


- Put away the deflector.
- Remove protective layer from plastic strip's adhesive surface and stick the strips on the marked locations.

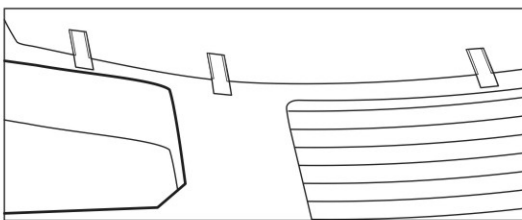


- Tuck the free borders of strips under hood edge.

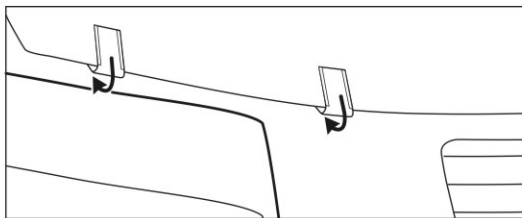

- Loosen stop screws of metal fittings with a crosshead screwdriver, align fittings with slots and mount deflector on the hood edge.

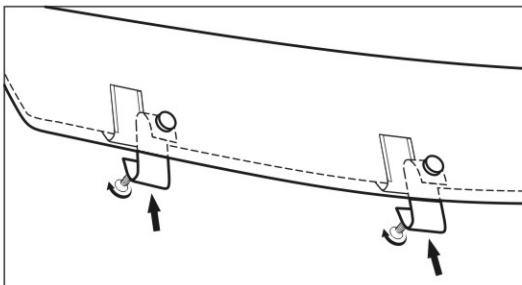

- Make sure the hood edge tightly adjoins the lower break of the metal bracket.

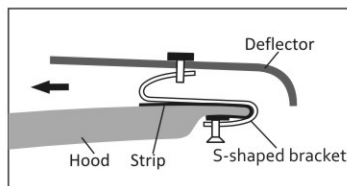

- Fasten stop screws and close the hood.

